


How to install the XM BayoRing


You need: Mk1 Fisheye, the XM BayoRing, a small screwdriver and a sheet of toilet paper.

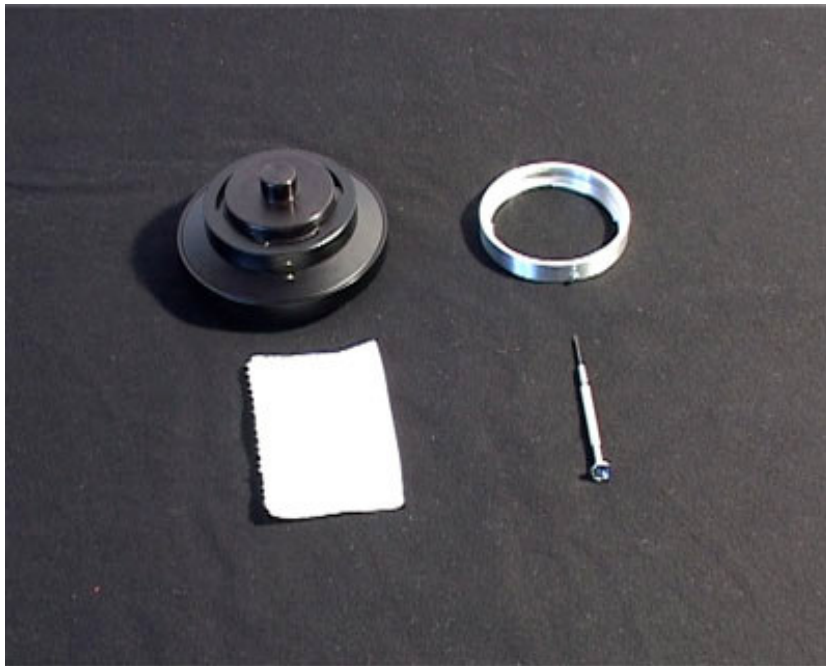

1. *Take off the rear lens cap.*



2. *Screw loose the protection screw of the original BayoRing. Be careful! Don't take off the screw completely. Just screw it so loose that you can turn the ring counterclockwise.*

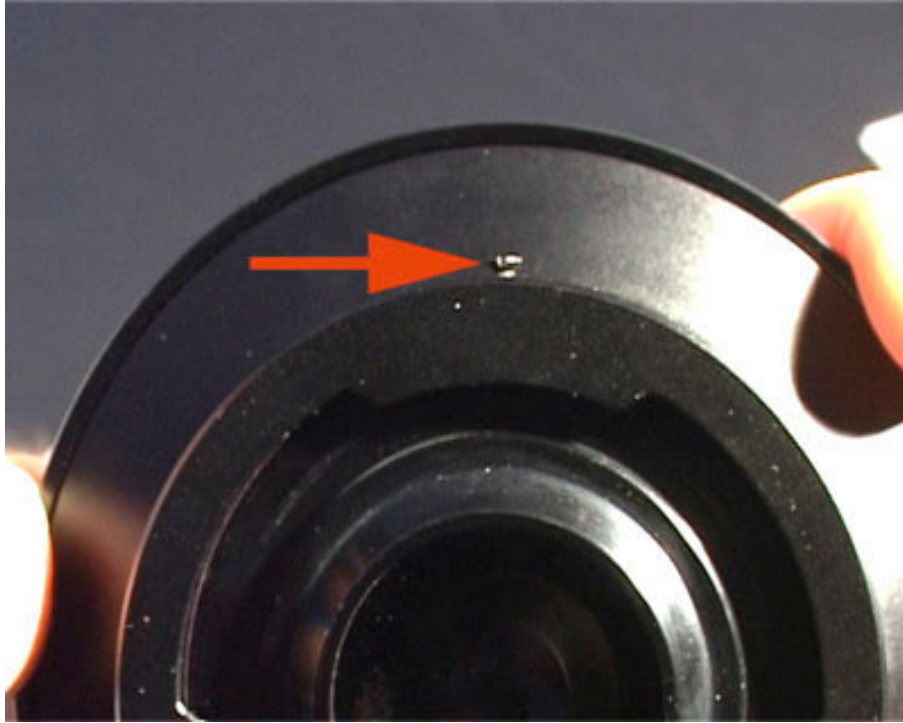

3. *Now take the original BayoRing off the MK1Fisheye by turning it counterclockwise.*



4. Then, check the thread of the MK1Fisheye. Be careful! It is very important that there is no dirt, as it could damage the thread of the new BayoRing. If necessary, dry clean the thread with a sheet of toilet paper. The thread of the MK1Fisheye is covered with a film of grease. Don't rub it off completely.



5. Take care that the protection screw is almost completely unscrewed. Now you can put on the XM BayoRing by screwing it clockwise onto the MK1Fisheye.

Annotation: There is a thin film of grease on the BayoRing, too. Don't rub it off as this film protects the thread.

6. Screw the XM BayoRing completely onto the MK1 Fisheye. (see picture)



7. Now unscrew the XM BayoRing 1 ½ turns. The red center dot now faces the yellow center dot in about 180 degrees.



8. Now put the fisheye, with the red center dot on top, onto the camera.



9. Turn the XM BayoRing 45 degrees clockwise, hold it at that position, and then turn the fisheye clockwise till it clamps.

