


How to install the VX1000 Replica BayoRing


You need: Mk1 Fisheye, the VX1000 Replica BayoRing, a small screwdriver and a sheet of toilet paper.

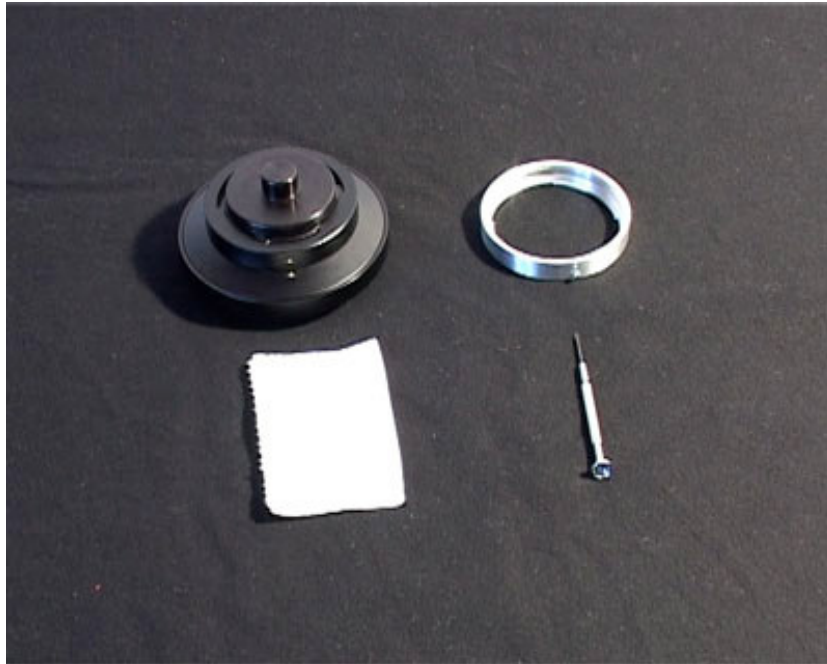

1. *Take off the rear lens cap.*



2. Screw loose the protection screw of the original BayoRing. Be careful! Don't take off the screw completely. Just screw it so loose that you can turn the ring counterclockwise.

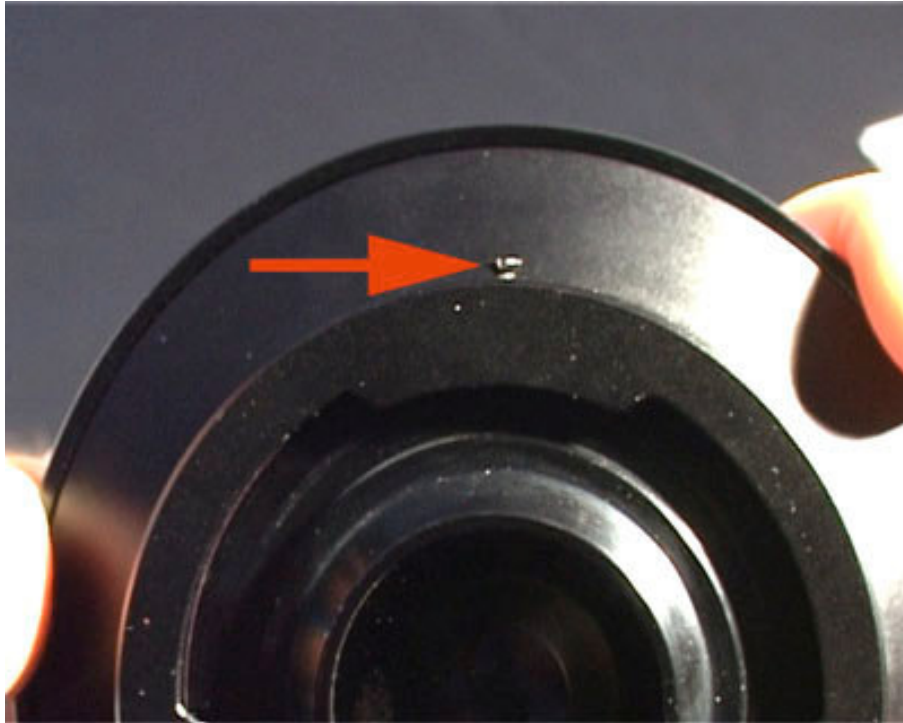

3. Now take the original BayoRing off the MK1Fisheye by turning it counterclockwise.



4. Then, check the thread of the MK1Fisheye. Be careful! It is very important that there is no dirt, as it could damage the thread of the new BayoRing. If necessary, dry clean the thread with a sheet of toilet paper. The thread of the MK1Fisheye is covered with a film of grease. Don't rub it off completely.



5. Take care that the protection screw is almost completely unscrewed. Now you can put on the VX1000 Replica BayoRing by screwing it clockwise onto the MK1Fisheye.

Annotation: There is a thin film of grease on the BayoRing, too. Don't rub it off as this film protects the thread.

6. Screw the VX1000 Replica BayoRing completely onto the MK1Fisheye. (see picture)



7. Now unscrew the BayoRing to the position shown in the picture. The red center dot almost faces the yellow center dot.



8. Now screw tight the small protection screw. If it doesn't fit, check the position of the BayoRing and if need be turn it a little.



9. That's it. You can now use your mk1 with the replica BayoRing on your vx1000 the same way you did it with the original one.

Annotation: The new protection screw of the BayoRing does not fit onto the original BayoRing! (You get three replacement screws with the new BayoRing)